

DJUCED

Load the MIDI mapping of a Hercules DJ controller


1 Run DJUCED with the DJ controller connected.
Click OK to New Hardware Detected window.

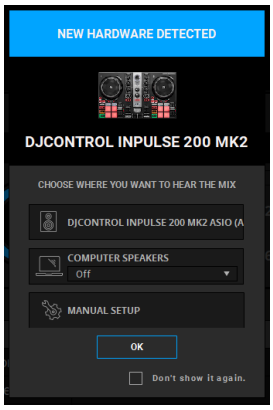


2 Click on Avatar icon on DJUCED top right, and then on Settings.

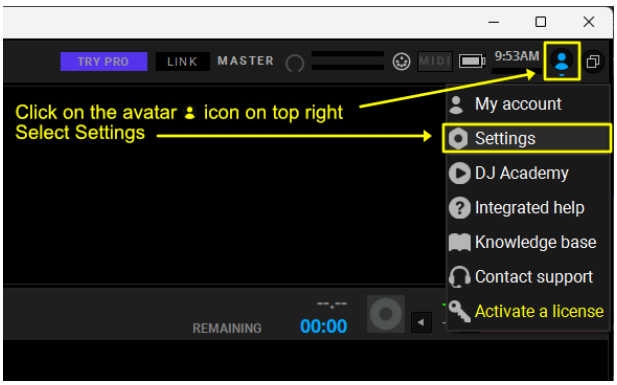


3 Go to “MAPPING” menu.
Click on “Import” button on bottom right.

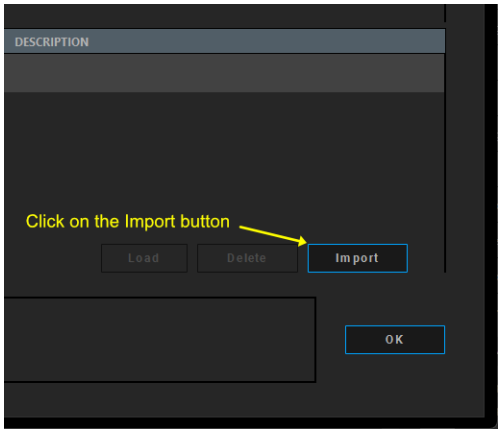


4 Browser to the folder where you stored the mapping file, select the file, and click on Open.

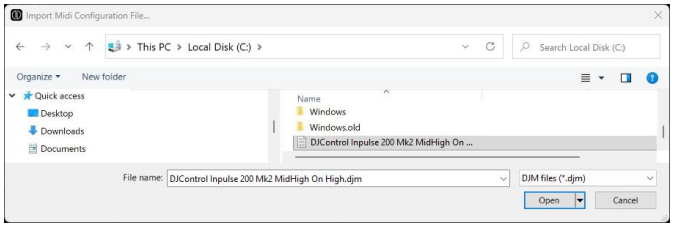

5 DJUCED re-detects the controller, click OK.
The menu shows the new mapping is loaded.

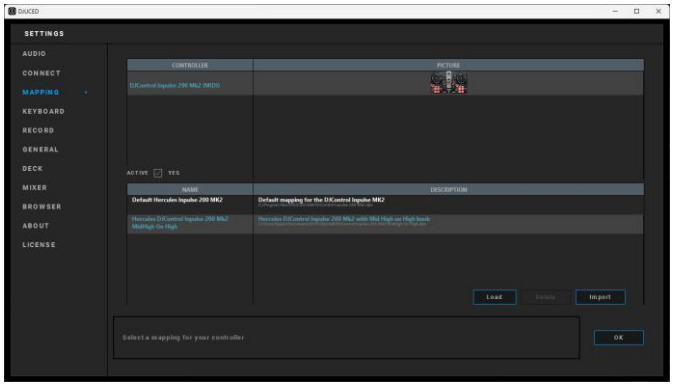

6 Click on OK.
The new mapping is active in DJUCED.

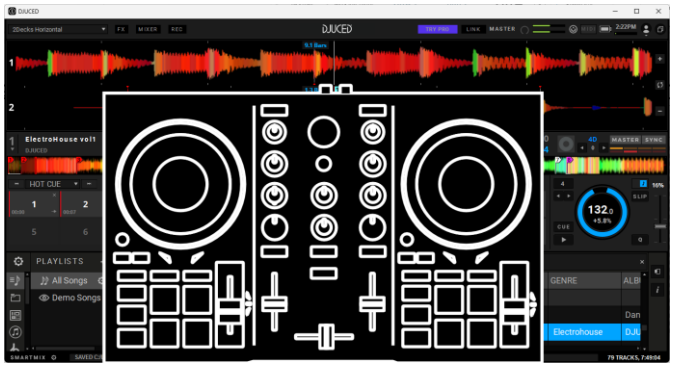

For support, go to https://support.hercules.com/

For forum, go to https://community.hercules.com/