

DJUCED

Load a MIDI mapping file (Hercules DJ controller)


1 Run DJUCED with the DJ controller connected. Click OK when DJUCED detect the Hardware.

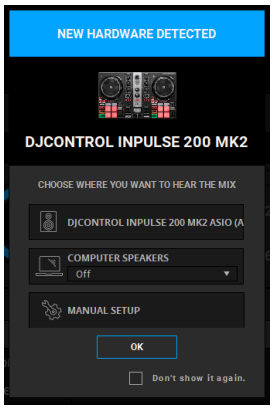


2 Click on the avatar icon on top right of DJUCED, then go to Settings.

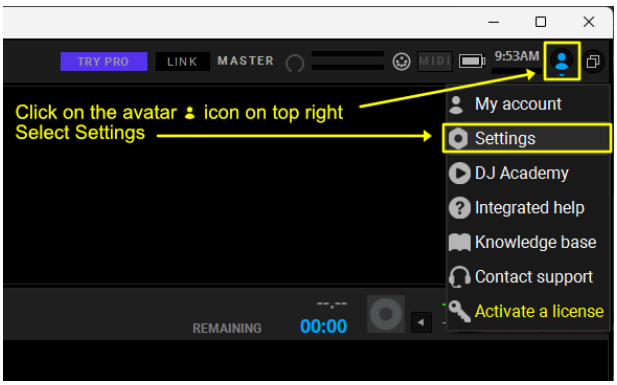


3 In “MAPPING” menu, click on “Import” button on bottom right to import your mapping file.

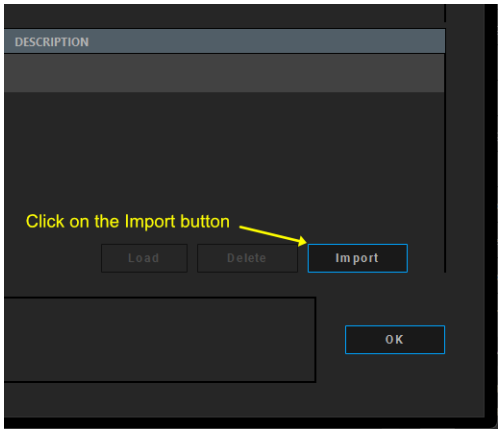


4 Browse to the location of the mapping file, select the file, then click on Open.

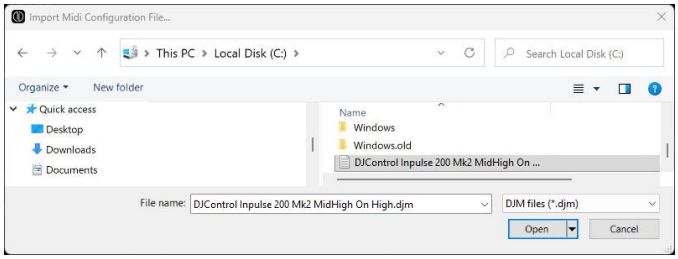

5 DJUCED detects the controller again, click OK. The new mapping is loaded as it is in blue.

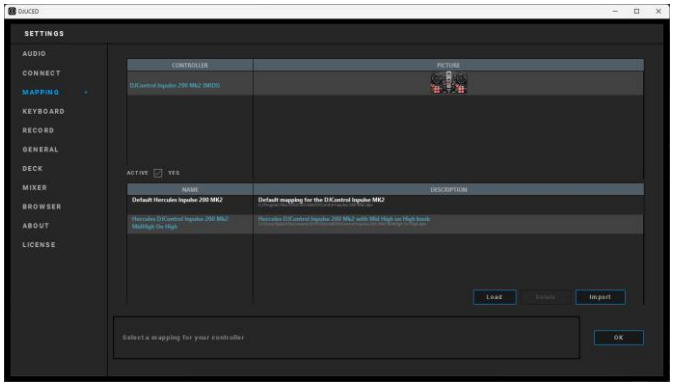

6 Click on OK.
The new mapping is active in DJUCED.

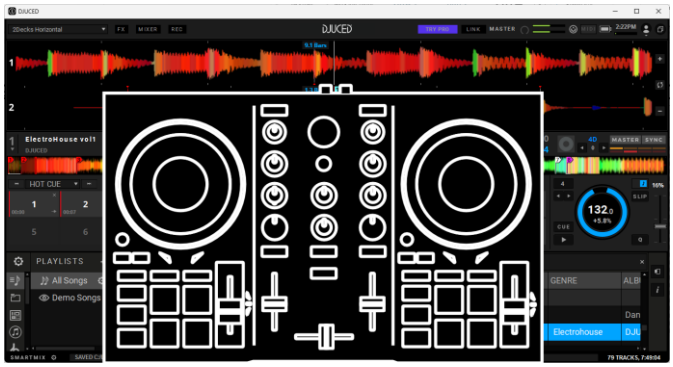

Hercules support : https://support.hercules.com/

Hercules forum: https://community.hercules.com/